





# RMT40 functionality overview

## TSP40 functions

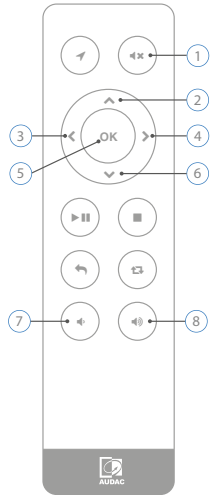


- ① Mute
- ② Preset up
- ③ Search down
- ④ Search up
- ⑤ Stop search
- ⑥ Preset down
- ⑦ Volume down
- ⑧ Volume up

## ISP40 functions

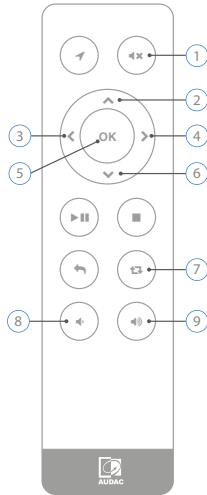


- ① Mute
- ② Preset up
- ③ Search down
- ④ Search up
- ⑤ Stop search
- ⑥ Preset down
- ⑦ Switch FM/DAB
- ⑧ Volume down
- ⑨ Volume up

## DSP40 functions

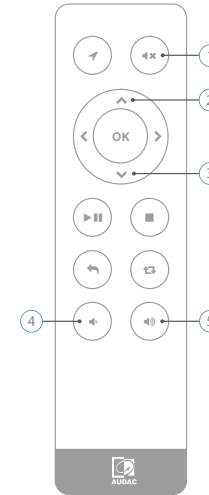


- ① Mute
- ② Next favourite
- ③ Previous favourite
- ④ Volume down
- ⑤ Volume up

## MSP40 functions

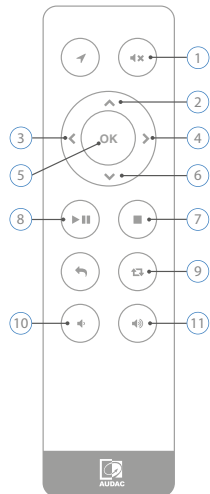

- ① Mute
- ② Previous
- ③ Rewind
- ④ Fast forward
- ⑤ Play
- ⑥ Next
- ⑦ Stop
- ⑧ Play / pause
- ⑨ Repeat cycle
- ⑩ Volume down
- ⑪ Volume up

## NOBA8A functions

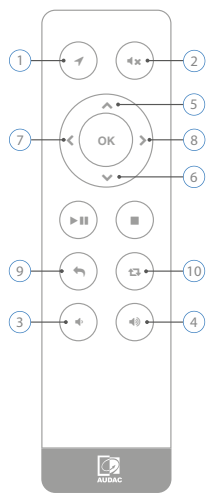

- ① Enter config mode  
(Hold 5 seconds)
- ② Mute
- ③ Volume down
- ④ Volume up
- ⑤ Level up (Config mode only)
- ⑥ Level down (Config mode only)
- ⑦ Previous speaker  
(Config mode only)
- ⑧ Next speaker  
(Config mode only)
- ⑨ Exit config mode  
(Hold 1 second)
- ⑩ Recall default settings  
(Hold 5 seconds)