
Package Contents

Pod Overview


Hyshare Pro Pod

Quick Start Guide

WPS-HP201T

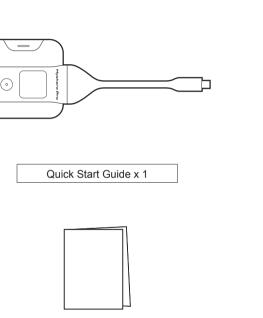

Hyshare Pro Pod x 2

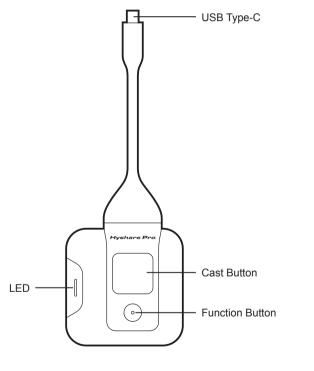


Pair Pod with Hyshare Pro

- 1 Check Hyshare Pro firmware version at standby screen and ensure it is 1.0.0.36 or newer.*
- * Please look up Hyshare Pro user manual at CYP website for more information.




- 2 Connect the Pod to Hyshare Pro's USB-C port.
- 3 Pairing status: breathing green is pairing & steady green is pairing finished.



Start the Presentation

1 Connect the Pod to your device's USB-C port.

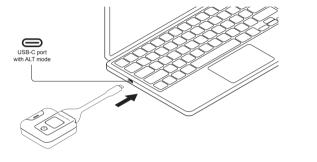

- 2 Wait until the LED light becomes steady white, press the cast button to share. The LED light is steady blue while screen sharing.
- 3 Long press cast button to switch between full-screen and split-screen.
- Press cast button again and stop sharing.

LED Color Definition LED

Pairing failed

Wi-Fi connection failed or disconnected

Please pair with the Station again.

disconnected. Please replugthe Pod.

USB-Cdoesn't support A/V output.

Station connection failed or

Breathing blue+red Firmware

Steady red

.ED color LED	Category	
reathing green	Firmware	Checking new version / upgrade complete
		Complete
reathing green	Pairing	Pairing
teady green	Pairing	Pairing finished
reathing white	Presentation	Preparing for presentation
Steady white	Presentation	Standby (ready to present)
Steady blue	Presentation	Presenting
Breathing blue+red	Firmware	Firmware upgrading

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that

compliance could void the user's authority to operate this equipment.

FEDERAL COMMUNICATIONS COMMISSION (FCC)

This equipment has been tested and found to comply with the limits for a Class

IMPORTANT NOTE:

This device has been tested with 5mm separation distance SAR, and it is compliant with the general population/uncontrolled RF exposure limit.

may cause undesired operation.

STATEMENT

Thank you for choosing Hyshare Pro Pod. For more infomation, please visit www.cypeurope.com